

## More Online

For more features and for troubleshooting, see the SecureUSB BT User Manual on the USB drive or on our website.

<https://www.securedrive.com/documents/user-manual-secureusb-bt.pdf>

NOTE: For security, we strongly suggest changing the factory password to a new password.



[www.securedrive.com](http://www.securedrive.com)  
[help@securedata.com](mailto:help@securedata.com)

Rev. 20190204A

USA: 1-800-875-3230  
International: +1-323-944-0822

**SECURE USB**

BLUETOOTH®

# SecureUSB BT

## Quick Start Guide

Welcome to SecureUSB™ BT Model, our app-operated hardware encrypted USB drive that's OS-independent and controlled via smartphone (iOS, Android).

### 1. Installing the App

Download and install the "DataLock" App from either Apple's App Store or Google Play.



**CAUTION** : Risk of loss of data. If you forget your password, all data will be inaccessible and reformatting will be required.

|  |   |   |   |
|--|---|---|---|
|  Red LED is on solid   | The USB is locked, or may indicate procedure failed |   | Represents the LED on the USB   |
|  Red LED is blinking   | Locked, connected to smartphone.                    |   | Represents the icon in the app. Green = success or unlocked. Red = failed or locked |
|   Blue LED | Unlocked<br>If blinking = transferring data.        |   |   |

## 2. Adding the USB BT to the App (Pairing)

- Plug in the USB and then start the app. 
- Tap the USB name. 

## 3. Unlocking the USB

With the app running and after tapping the USB name: 

- Enter the password (factory default 11223344).  
- Tap Unlock.   

NOTE: After 10 failed attempts to unlock it, the USB drive will be erased (reset). Refer to *Brute Force Hacking* in the User Manual.

## Changing the Password

After unlocking the drive in the app:  

- Tap the desired USB name.
- Tap **Change Password**.
- Enter your new password (see requirements below) and then retype it into the *Confirm* Field.
- Tap **Change Password**.  

### PASSWORD REQUIREMENTS

- 7-15 digits, special characters okay
- Cannot all be the same number/letter or consecutive numbers/letters

## Disconnecting and Locking

Unplug the USB—it locks automatically.

Generally, ejecting the USB first is not necessary. To lock the USB without unplugging it, swipe the USB name left and tap Lock. 