



### More Online

For more features and for troubleshooting, see the *SecureDrive-BT Owner's Manual* on our website.

[www.securedrive.com/documents/user-manual-bt.pdf](http://www.securedrive.com/documents/user-manual-bt.pdf)



[www.securedrive.com](http://www.securedrive.com)  
[help@securedata.com](mailto:help@securedata.com)

Rev. 20171115B

USA: 1-800-875-3230  
International: +1-323-944-0822



## Quick Start Guide

Welcome to SecureDrive™ BT Model, our app-operated hardware encrypted external portable storage that's OS-independent and controlled via smartphone (iOS, Android).

### Installing the App

Download and install DataLock App from either Apple's App Store or Google Play.











Apple's APP  
Store



Google  
Play












**CAUTION** : Risk of loss of use. If you forget your password, all data will be inaccessible and reformatting will be required.

 Red LED is on solid	The drive is locked, or may indicate procedure failed	 Blue LED is blinking	Transferring data
 Red LED is blinking	Locked, ready for input	 	Represents the LED on the drive
 Green LED is on solid	Drive is unlocked	 	Represents the LED in the app

### Unlocking the SecureDrive










**CAUTION:** Possible loss of data, settings, and password. After 10 failed attempts to unlock the drive, it will reset to a blank drive. Refer to *Brute Force Hacking* in the Owner's Manual.

1. Start the app.  
2. Tap the drive name. If not shown, click  to add it. 
3. Enter password 11223344 (the factory preset)  
4. Tap   

For security, we strongly suggest changing the factory password to your new password.

### Changing the Password

1. In the app unlock the drive.  
2. Tap the desired drive name. 
3. Tap **Change Password** and enter your current password. 
4. Enter your new password (see requirements below) and then retype it into the Confirm field. 
5. Tap **Change Password**.  

#### PASSWORD REQUIREMENTS

- 7-15 digits, special characters okay
- Cannot all be the same number/letter nor consecutive numbers/letters

### Disconnecting and Locking

Unplug the USB cable—the drive locks automatically. Generally, ejecting the drive first is not necessary. To lock the drive without disconnecting, swipe the drive name left and tap the Lock icon. 