









# Quick Start Guide


Welcome to SecureDrive™ Keypad Model, our hardware encrypted external portable storage that is OS-independent and has an on-board keypad for user authentication. For security, we strongly suggest changing the factory default PIN to your new User PIN.

**NOTE:** After starting a procedure, perform each step within 10 seconds. If you fail (  LED blinks) then restart the procedure.



**CAUTION:** Risk of loss of use. If you forget your User PIN and no Admin PIN exists, or if you forget both PINs, all data will be inaccessible and reformatting will be required.






 Red LED is on solid	The drive is locked, or may indicate procedure failed	 Blue LED is blinking	Transferring data
 Red LED is blinking	Locked, ready for input		Key button
 Green LED is on solid	Drive is unlocked		Press Key button twice rapidly
 Green LED is blinking	Waiting for input		

**NOTE:** Start all procedures with the drive connected to a computer with the USB cable and locked. 

## Unlocking in User Mode






















**CAUTION:** Possible loss of data, settings, and both PINs. After 10 failed attempts to unlock the drive, it will reset to a blank drive. Refer to *Brute Force Hacking* in the Owner's Manual.


1. Press  [  ]
2. Enter PIN (new only: 11223344, otherwise obtain PIN from vendor) [  ]
3. Press  [  ]

## Changing the User PIN

**PIN REQUIREMENTS:** • 7-15 digits • Cannot all be the same number nor consecutive numbers.



1. Press  [  ]
2. Enter the **User PIN** [  ]
3. Press   [  momentarily]
4. After you see  then press   [  ]
5. Enter the new **User PIN** [  ]
6. Press   [  ]
7. Re-enter the new PIN [  ]
8. Press   [   ]

## Verifying which PIN Exists

You can verify if a User and/or Admin PIN has been created. With the drive locked, pressing  displays these LEDs for 3 seconds:

- No PIN exists [  ]
- Only User PIN exists [  ]
- Only Admin PIN exists [  ]
- Both PINs exist [   ]

## Disconnecting and Locking

Unplug the USB cable—the drive locks automatically. Generally, ejecting the drive first is not necessary. To lock the drive without disconnecting, press and hold  until the  LED lights.



### More Online

For more features and for troubleshooting, see the *SecureDrive Keypad Model Owner's Manual* on our website.

<https://www.securedrive.com/documents/user-manual-keypad.pdf>



www.securedrive.com  
help@securedata.com  
Rev. 20180410A

USA: 1-800-875-3230  
International: +1-323-944-0822